Washing:


- Improper use of a pre-soak solution can cause a chemical reaction with the china's glaze, etching the glaze surface. Once etched, the surface is more prone to glaze abrasion, metal marking and food staining.
- Never use scouring powder or a scouring pad to remove stains. The only product we recommend for removing food soil deposits is the white 3M Scotch-Brite® 9030 pad.

Handling:

- Always scrape and rack soiled china immediately after use.
- Avoid stacking soiled china. If a backlog does occur, stack by item not more than twelve pieces high on the back counter.
- Never allow soiled dishes to stand overnight.





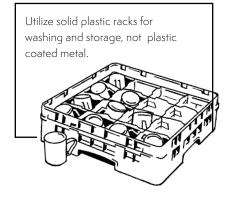

Always store china in active use away from or above the food preparation area.



